
MUSIC BOX MACHINE

en **Instructions for use**

At a glance (contents)

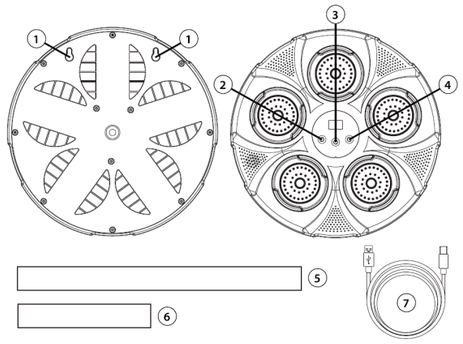

1. Wall mounting hook
2. Speed button
3. On/Off button | Music button (Wireless connection)
4. Mode button
5. 2 long Velcro straps
6. 2 short Velcro straps
7. USB-C charging cable

EG - DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonized requirements of the EU. We, Jaxmotech GmbH, hereby declare that the BT 012025 Music Box Machine complies with Directive 2014/53/EU. The complete declaration of conformity and instruction manual can be found online at www.jaxmotech.de/downloads.

About these instructions

The Music Box Machine is an electronic device that revolutionizes your workout. This smart machine combines high-intensity cardio training with rhythmic music that syncs to your favorite playlists. Thanks to its space-saving, wall-mounted design and adjustable speed levels, it's the perfect workout tool to burn calories and relieve stress.

Keep these instructions for future reference, as they contain important information. If you pass this item on to someone else, please also include these instructions. Symbols used in these instructions:

This symbol warns you about the risk of injury.

This symbol warns you about the risk of injury caused by electricity.

Signal words used in these instructions:
WARNING warns about the potential risk of serious or fatal injury.
CAUTION warns about the potential risk of minor injuries.
NOTICE warns about the potential risk of material damage.

This indicates additional information.

Use the included USB cable to connect to a 5-volt USB power supply.

Safety instructions

General safety

Danger to children and persons with reduced physical, sensory, or mental capabilities (e.g., partially disabled persons, elderly persons with limitations in their physical and mental abilities) or lack of experience and knowledge (e.g., older children).

This product can be used by children aged 8 years and older, as well as by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge, if they have been supervised or instructed in the safe use of the product and understand the hazards involved.

Children must not play with the product.

Cleaning and user maintenance must not be performed by children unless they are older than 8 years and supervised.

Do not allow children to play with the packaging film. Children can become entangled in it and suffocate.

This device is intended for indoor use only. It must not be used outdoors while camping or on public transport.

RISK OF ELECTRIC SHOCK

Faulty electrical installation or excessive mains voltage can cause electric shock.

- The product must only be used with the supplied USB charging cable.
- Only connect the product if the mains voltage of the wall socket matches the specification on the rating plate.
- Note that the output specification of the USB power adapter must not exceed 5V DC.
- Only connect the product to an easily accessible wall socket so that you can quickly disconnect it from the mains in the event of a malfunction.
- Do not charge the product if it shows visible damage or if the USB charging cable or USB power adapter is defective.
- If the product's USB charging cable is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid hazards.
- Do not open the housing. Leave repairs to qualified professionals. Contact a specialist workshop. Liability and warranty claims are excluded in the event of repairs carried out independently, improper connection, or incorrect operation.
- Never touch the USB power adapter with wet hands.
- Always unplug the USB charging cable from the USB port by its connector.
- Never use the USB charging cable as a carrying handle.
- Keep the product, the USB power adapter, and the USB charging cable away from open flames and hot surfaces.
- Route the USB charging cable so that it does not create a tripping hazard.
- Do not kink the USB charging cable or place it over sharp edges.
- Never insert any objects into the product housing.

NOTICE!
RISK OF DAMAGE!
Improper handling of the product can lead to damage.
- Use the product indoors only.
- Do not immerse the product in water or other liquids.
- Never expose the product to impacts, direct sunlight, open flames, extreme temperatures (e.g., heating), or the elements (e.g., rain).
- Do not use the product if it has been dropped or damaged in any way. If necessary, have the product inspected and/or repaired by qualified technicians.
- Do not open the casing; leave repairs to qualified professionals.
- Do not modify the product.
- Use the product only with the original parts supplied.
- Do not allow the USB charging cable to come into contact with hot parts.
- Do not use the product if any of its plastic components are cracked, broken, or deformed. Replace damaged components only with genuine original replacement parts.

WARNING!
RISK OF INJURY AND DAMAGE!

This product has a built-in battery. Batteries may contain flammable materials. If batteries are mishandled, they may leak, become very hot, catch fire, or, under certain circumstances, explode. This can result in serious injury and damage.
This product contains batteries that are not replaceable.
- Do not disassemble batteries, throw them into fire, or short-circuit them. Do not expose the battery to extreme conditions, such as placing the product on a radiator or in direct sunlight.
- The battery must be removed for separate disposal. DO NOT attempt to open or disassemble the product to remove the battery yourself. The battery must be removed by qualified personnel.
- Battery fluid may leak during misuse; avoid contact. Leaking battery fluid can cause irritation or burns.
- If battery fluid comes into contact with skin, eyes, or mucous membranes, immediately wash and rinse the affected area with clean water. Consult a doctor if necessary.
- Do not disassemble, short-circuit, or throw the battery into fire.
- Keep the battery out of the reach of children.
- Do not short-circuit the battery.
- Do not forcibly discharge the battery.
- Do not deform the battery.
- Do not dispose of the battery in fire.
- Dispose of used batteries according to the manufacturer's instructions.
- Never attempt to disassemble or reassemble the battery.

INSTALLATION

1. Carefully unpack the device.
2. The device may be secured for transport with shipping locks. Remove these completely. Do not use harsh cleaning agents to remove any remaining shipping locks.
3. Before connecting the device, check that the power cord and the device itself are not damaged.
4. Ensure that the device is disconnected from the power supply.

Choice of location

Position the device in a suitable location:
- vertically and without vibration
- at a safe distance from extreme heat sources (>1m)
- Remove the covers from the two short hook-and-loop fasteners and attach them to the back of the machine's slots.
- Remove the covers from the two long hook-and-loop fasteners and attach them to the wall. The distance between the fasteners should correspond to the distance between the slots on the machine. You can then attach the machine to the long fasteners and adjust the height as needed.
- Alternatively, you can attach the hooks to the wall. To do this, use the hooks on the back of the device and attach it to suitable wall hooks.

OPERATION

Setup

1. Remove all packaging materials before first use. The battery is not fully charged upon delivery. To achieve maximum battery capacity, fully charge the device before first use. Connect the Musical Boxing Machine to a USB power adapter (not included) using the supplied USB-C charging cable, as shown.
2. Plug the USB power adapter into a wall outlet. The LCD will glow red while the device is charging. Once the device is fully charged, the light will turn off. Charging time is approximately 4.5 hours.
3. Press and hold the power button until the device turns on with background music and light effects. You can perform the boxing exercises with the background music OR play your own music by connecting your mobile phone via a wireless connection.
4. Press the Music button to connect the device to another device that also has wireless connectivity enabled. Select our device name „BT 012025" and establish the connection. You will receive an audible notification. You can listen music from the device to which your mobile device is connected.
5. The music volume can be decreased by pressing and holding the „Tempo" button for 3 seconds or increased by pressing and holding the „Mode" button for 3 seconds. The display will show „U00" to „U30."
6. Begin the boxing training according to the blue LED sequence. There are different sound effects for hits and misses. Once you hit the target, the display will show „C01" and count the number of hits up to „999."
7. To turn off the sound effect, press and hold the „Tempo" and „Mode" buttons simultaneously for 3 seconds. The display will show „F00." Press and hold the „SPEED" and „MODE" buttons simultaneously for 3 seconds to reactivate the sound effect. „F01" will appear on the display.
8. Pressing the „Mode" button allows you to select from 9 different training modes. „P01" through „P09" will appear on the display.
9. Pressing the „Tempo" button allows you to select from 9 speeds. „H01" through „H09" will appear on the display.
10. Turn off the device using the power button.
11. The device will automatically turn off if it is not used for an extended period of time.

CLEANING AND CARE

WARNING!
DANGER OF ELECTRIC SHOCK!

Before cleaning the device, disconnect it from the power supply.
Never immerse the device in water or other liquids.

TROUBLESHOOTING AND REMEDY

DANGER!

- Never connect the device to the power supply if the device, power cord, or plug shows any visible damage.
- In case of danger or malfunction, immediately unplug the device from the wall outlet.
- Never attempt to repair the device yourself. If your device is not working properly, contact the retailer from whom you purchased it.
- If the power cord is damaged, it must be replaced only by the manufacturer, a manufacturer--authorized service centre, or a qualified electrician to avoid hazards.
- Never operate a defective device.
- Never operate a device that has been dropped.

Technical Specifications

Model	: BT 012025
Product Number	: 749 832
Rechargeable battery (non-replaceable)	: Lithium-ion, DC 3.7 V, 2000 mAh, 7.4 Wh
USB Input	: DC 5 V/1A

Wireless Connection:

Frequency Power	: 20 dBm
Frequency band	: 2400-2483,5 MHz
Radio range	: up to 10 meters
Charging Time	: approx. 4.5 hours
Ambient termperature	: +10 bis +40°C

Information about the built-in rechargeable battery:

Model	: 18650-20
Manufacturer	: Shenzhen Lindea Technology Co. ,Ltd 202, No. 15-17, C Zone, Sanhe Huaqiao New Village, Tongsheng Community, Dalang Street, Longhua District, Shenzhen City
E-Mail	: indea@sina.com
Manufacturing date	: 2026/06
Made in	: China
Manufactured by	: Jaxmotech GmbH Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment. Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Appliances, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste! You are legally obliged to dispose of old appliances separately from household waste. Electronic appliances contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old appliances can be disposed of free of charge is available from your local authorities.
Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/ rechargeable batteries prior to disposal.

Warning! This appliance contains rechargeable batteries that, for safety reasons, are firmly built into the appliance and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the appliance intact to a collection point where the appliance and battery will be disposed of properly.

Model	: BT 012025
Manufactured by	: Jaxmotech GmbH Ostring 60, 66740 Saarlouis, Germany info@jaxmotech.de

CE

MANUFACTURER'S WARRANTY

- We offer a 2-year warranty on your device, in addition to the standard commercial warranty, starting from the date of issue of the invoice or delivery note.
- Within this warranty period, upon presentation of the proof of purchase or delivery note, all manufacturing and/or material defects will be rectified free of charge by repairing and/or replacing the defective parts or (at our discretion) exchanging the device for an equivalent, flawless item.
- The manufacturer is not liable for personal injury or property damage caused by improper use or maintenance.
- Fragile parts, such as glass, plastic, or light bulbs, are excluded from the warranty.
- The warranty is void if the device has been opened and/or modified by you or an unauthorized third party.
- In the event of improper use, the safety and functionality of the device can no longer be guaranteed, and any warranty claim will be void.
- Any use other than that described in these operating instructions is prohibited and will result in the loss of warranty, guarantee, and liability.
- We reserve the right to make changes to the device, the operating instructions, or the packaging.

If you wish to make a complaint, we generally recommend that you first contact the retailer from whom you purchased the device.

Should a repair be necessary, you can reach our hotline at the following service number:
+49 (0)6831 505 9897

Technical Service: Sertronics GmbH, Ostring 60, 66740 Saarlouis, Germany
E-Mail: service-ww@jaxmotech.de