


At a glance (features)

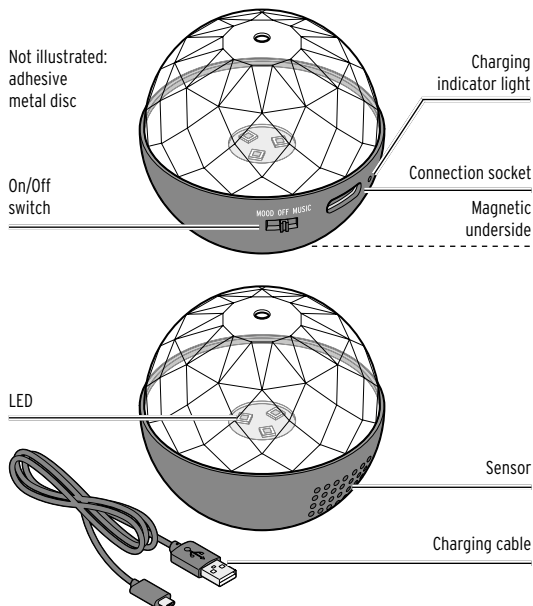

Dear Customer

The ultra-bright, coloured LEDs beam colourful, flashing light patterns onto walls and ceilings or gently change the colour gradient.

You can simply stand the disco ball upright or attach it to a metal surface with its magnetic underside.

A small metal disc that you can stick to a non-metallic surface is also included.

We wish you lots of fun at your next party!

Your Tchibo Team

Technical specifications

Model:	720 841
Rechargeable battery: (non-replaceable)	lithium-polymer, 3.7 V DC 400 mAh, Watt-hour rating: 1.48 Wh, (tested as per UN 38.3) Manufacturer: Shenzhen Zouyou Power Co., Ltd, Room 908, Block A, Tongxin Technology Building No. 6261, Bao'an Avenue, Quiaotou Community, Fuhai Street, Bao'an District, Shenzhen, China
Power:	0.5 W
Bulb:	LEDs
Ambient temperature:	+10 to +40 °C

Made exclusively for: Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany



For your safety

Intended use

- The product is suitable for use in dry, indoor rooms.
- The product is designed for private use and is not suitable for commercial purposes.
- Only use the product under moderate climatic conditions.
- This product is a special lamp due to its light colour. This special lamp is not suitable for lighting whole rooms.

Danger to children

- This product is not a children's toy. The device may only be used under adult supervision.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

Danger to persons with epilepsy or suspected epilepsy

- In a very small number of people, certain visual influences (e.g. flickering lights, like those in disco balls etc.) can lead to epileptic seizures. These seizures can start with various symptoms like dizziness, changes in vision, eye and facial twitching, loss of orientation, confusion, or temporary loss of consciousness. People who lose consciousness may injure themselves on nearby objects or by falling down. If such symptoms should arise when using the product, switch off the disco ball immediately and seek medical assistance. Parents should supervise their children and ask them about the symptoms listed above. The probability of such seizures is higher among children and teenagers than adults.

Risk of injury

- The LEDs in the disco ball are very bright. Do not look directly into the LEDs.
- Magnets can potentially impair the function of pacemakers and affect the correct position of endoprotheses in the body. Therefore, do not carry the product directly on your body, but keep it at a distance. Before using this product, consult your doctor.
- Keep the magnets away from cards with magnetic strips, such as credit cards, debit cards, etc. These may become damaged. You should also keep the magnets away from CRT screens, magnetic storage media, watches and all devices that are affected by magnetism or could suffer functional impairment.

Danger due to electricity

- Do not immerse the product in water or other liquids, as this poses a risk of electric shock.
- Never place containers filled with liquids such as vases, etc. onto or in the immediate vicinity of the product. They could topple over and the liquid could impair the electrical safety of the device.
- Do not insert any objects into the openings on the device. There is a danger of coming into contact with live electrical parts.
- Do not use the device and the charging cable if they are visibly damaged or if the device has been dropped.
- Do not make any modifications to the device. Have repairs to the product carried out only by a specialist workshop. Improper repairs can result in considerable danger to the user.
- Do not use the product outdoors or in damp rooms.

Danger due to electricity when charging the battery

- Do not charge the product outdoors or in damp rooms. Do not touch the mains adapter (not included) with wet hands.
- Use only suitable mains adapters for charging the product. Do not use a faulty mains adapter or attempt to repair a faulty mains adapter.
- Only connect the device to a properly installed power socket with a mains voltage that complies with the technical specifications of the mains adapter used.
- The On/Off switch does not disconnect the device from the mains voltage. It can only be disconnected by pulling out the mains adapter, which must be in an easy-to-reach place. The power socket used must therefore be easily accessible so that the mains adapter can be removed quickly if necessary.
- Remove the mains adapter from the power socket if malfunctions occur during charging, during thunderstorms and before cleaning the product.
- Switch off the disco ball before disconnecting it from the power supply.

Danger of fire/explosion

- **WARNING:** Rechargeable batteries must not be taken apart, thrown into fire or short-circuited. Do not modify and/or deform/heat/dismantle rechargeable batteries.
- You cannot and must not remove or replace the built-in rechargeable battery yourself. There is a risk of explosion if the battery is replaced incorrectly. It must be replaced only with a battery of the same or of equivalent type. If the rechargeable battery is defective, contact a specialist workshop.

Material damage


- Use only the original charging cable to charge the product.
- Protect the product from impacts, falls, dust, moisture, direct sunlight and extreme temperatures.
- Do not use any caustic, aggressive or abrasive products for cleaning. Clean the product using a slightly dampened, lint-free cloth, if necessary.

Charging the battery

Before first use and when the LEDs stop flashing, the rechargeable battery must be charged.


- You can use the device while it is charging.
- To save power, unplug the USB mains adapter from the power socket after charging.
- To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 2 to 3 months, even if you do not use the product.

Charging time: approx. 2.5 hours
Light duration: approx. 3.5 hours

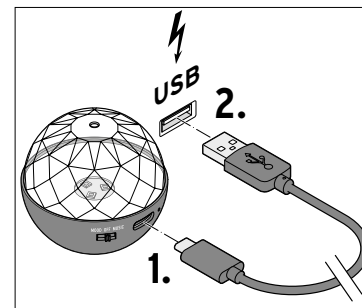

1. Insert the USB-C plug of the charging cable into the connection socket on the disco ball.
2. Connect the USB-A plug to a suitable mains adapter (not included).
3. Insert the mains adapter into a power socket. The charging indicator light lights up red while the battery is charging. The charging indicator light turns green once the rechargeable battery is fully charged. The disco ball is ready for use.
4. Unplug the mains adapter from the power socket and remove the charging cable from the connection socket on the disco ball.

Use

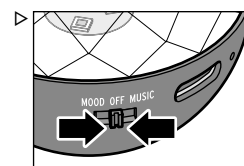

Slide the On/Off switch to **MOOD**. The colours of the disco ball change in a gentle gradient.

- ▷ Slide the On/Off switch to **MUSIC**.

As soon as the disco ball's sensor detects music or other sounds, the LEDs flash in different colour combinations.

- ▷ Slide the On/Off switch to **OFF**.

The disco ball is switched off.


Attaching the metal disc

The product comes with a metal disc that you can attach, for example under a shelf or similar. You can then attach the disco ball to it with its magnetic underside and remove it again at any time.

- Remove the blue protective film from the metal disc.

- The adhesive surface adheres to all smooth and flat surfaces.
- Do not stick the metal disc over joints or other irregularities. The adhesive surface will not stick onto textured surfaces.
- The adhesive surface is intended for permanent fixture. Avoid attaching the metal disc to sensitive surfaces if you want to remove it later.
- It sticks best at temperatures between 23 °C and 40 °C.
- The metal disc is only intended for attaching the magnet to the disco ball. Do not attach any other magnets to it.

1. The surface must be free of dust, grease, silicone and limescale. Clean the surface.
2. Slightly pre-dry the cleaned spot, then let it dry thoroughly.

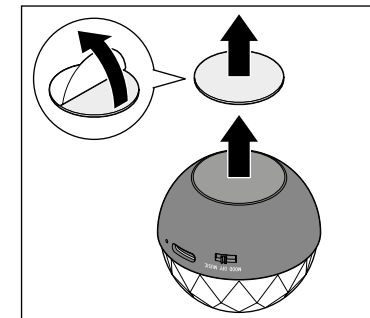

3. Peel the protective film off the back of the metal disc and stick the metal disc onto the cleaned surface.
4. Press on the metal disc.
5. Wait 24 hours, then the metal disc is ready for use.

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled. Recycling reduces the amount of refuse and preserves the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.

Devices, single-use batteries and rechargeable batteries marked with this symbol must not be disposed of along with household waste!


You are legally obliged to dispose of old devices separately from household waste. Electronic devices contain hazardous substances and, if stored or disposed of improperly, may cause harm to health and the environment. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.

Flat single-use and rechargeable batteries must be handed in at a local authority collection point or returned to a battery retailer. Tape off the contacts of lithium single-use/rechargeable batteries prior to disposal.

Warning! This device contains a rechargeable battery that, for safety reasons, is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. For this reason, take the device intact to a collection point where the device and battery will be disposed of properly.

Mini disko topu

Genel bakış (ambalaj içeriği)

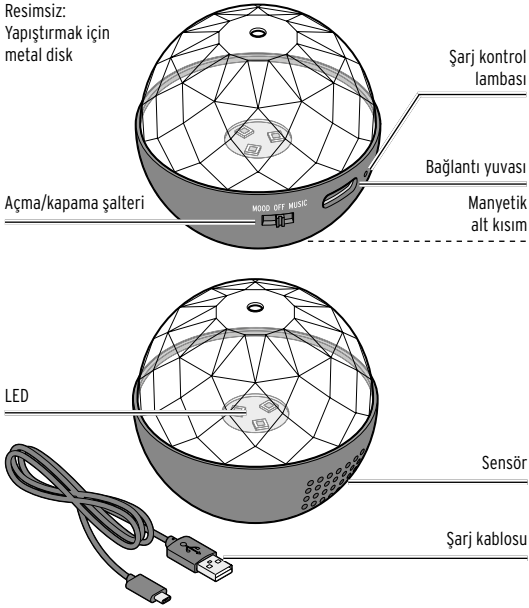

Değerli Müşterimiz!

Aşırı parlak, renkli LED'ler duvarlarda ve tavanlarda renkli, yanıp sönen ışık desenleri oluşturur veya yumuşak renk geçişleri sağlar.

Disko topunu dik tutabilir veya manyetik alt kısmı ile metal bir yüzeye tutturabilirsiniz. Metal olmayan bir yüzeye yapıştırabileceğiniz küçük bir metal disk de mevcuttur.

Bir sonraki partinizde bol eğlenceler dileriz!

Tchibo Ekibiniz

Teknik bilgiler

Model:	720 841
Şarjlı pil:	Polimer-Lityum şarjlı pil, 3,7 V DC 400 mAh,
(değiştirilemez)	nominal enerji: 1,48 Wh (UN 38.3'e göre test edilmiştir)
	Üretici: Shenzhen Zouyou Power Co., Ltd, Room 908,
	Block A, Tongxin Technology Building No. 6261,
	Bao'an Avenue, Quiaotou Community, Fuhai Street,
	Bao'an District, Shenzhen, China (Çin)
Güç:	0,5 W
Ampul:	LED'ler
Ortam sıcaklığı:	+10 ila +40 °C



Tchibo için özel olarak üretilmiştir : Tchibo GmbH, Überseering 18, 22297 Hamburg, Germany, www.tchibo.com.tr

Kendi güvenliğiniz için



Kullanım amacı

- Bu ürün, kuru iç mekanlarda kullanım için uygundur.
- Bu ürün özel kullanım için tasarlanmış olup ticari amaçlar için uygun değildir.
- Ürünü sadece uygun ortam koşullarında kullanın.
- Bu ürün ışık rengi gereği özel bir lambadır. Bu özel lamba ev içerisinde oda aydınlatmak için uygun değildir.

Çocuklar için tehlike

- Ürün oyuncak değildir. Cihaz sadece bir yetişkinin gözetimi altında kullanılmalıdır.
- Çocukları ambalaj malzemesinden uzak tutun. Aksi takdirde boğulma tehlikesi vardır!

Epilepsisi olan ve epilepsi şüphesi olan kişiler için tehlike

- Çok az sayıda insanda, bazı görsel etkiler (örn. disko toplarında olduğu gibi titreyen ışıklar vb.) epilepsi nöbetlerine yol açabilir. Bu tür nöbetler değişik semptomlar örn., baş dönmesi, görme bozukluğu, göz veya yüz seğirmeleri, oryantasyon bozukluğu, şaşkınlık ya da geçici bilinç kaybı ile başlayabilir. Bilinç kaybı yaşayan kişiler, yakınlarında bulunan objeler ya da düşme nedeniyle yaralanabilir. Böyle bir belirti ortaya çıkarsa, disko topunu hemen kapatmalı ve tıbbi yardım isteyin. Ebeveynler çocuklarını gözlemlemeli ve yukarıda belirtilen semptomları onlara sormalıdır. Çocuklarda ve gençlerde, böyle bir nöbetin olma olasılığı yetişkinlerden daha fazladır.

Yaralanma tehlikeleri

- Disko topundaki LED'ler çok parlaktır. LED'lere doğrudan bakmayın.
- Mıknatıslar duruma göre kalp pillerinin fonksiyonunu bozabilir ve endoprotezlerin vücuda doğru şekilde oturmasını etkileyebilir. Bu nedenle ürünü doğrudan vücudunuzda taşımayın, belli bir mesafede tutun. Ürünü kullanmadan önce doktorunuza danışın.
- Mıknatısları kredi kartı, banka kartı vs. manyetik şeritli kartlardan uzak tutun. Bunlar zarar görebilir. Ayrıca mıknatısları tüplü monitörlerden, manyetik hafıza kartlarından, saatlerden ve manyetizmadan etkilenebilecek veya fonksiyonu bozulabilecek tüm cihazlardan uzak tutun.

Elektrikten kaynaklanan tehlikeler

- Ürünü suya veya başka sıvılara daldırmayın, aksi halde elektrik çarpması tehlikesi oluşabilir.
- Vazo gibi sıvı dolu kapları cihazın üzerine veya yakınına koymayın. Bu kapların devrilmesi durumunda, içlerindeki sıvılar, elektrikli cihazlarda tehlike oluşturur.
- Cihazın gövdesinde bulunan deliklere herhangi bir nesne sokmayın. Gerilim taşıyan parçalara temas etme riski söz konusudur.
- Gözle görülür şekilde hasar görmüş ise veya cihaz düşürülmüş ise cihazı ve şarj kablosunu kullanmayın.
- Cihazda herhangi bir değişiklik yapmayın. Üründe yapılması gereken onarımları sadece yetkili bir servise yaptırın. Usulüne uygun olmayan onarımlar sonucu kullanıcı için büyük tehlikeler oluşabilir.
- Cihazı açık alanda veya nemli yerlerde kullanmayın.

Akü şarj edilirken elektrikten kaynaklanan tehlikeler

- Ürünü açık havada veya nemli odalarda şarj etmeyin. Elektrik adaptörüne (teslimat kapsamında değil) ıslak elle dokunmayın.
- Şarj için sadece uygun elektrik adaptörleri kullanın. Arızalı bir elektrik adaptörü kullanmayın ve tamir etmeye çalışmayın.
- Cihazı sadece şebeke gerilimi kullanılan elektrik adaptörünün teknik verilerine uygun olan ve doğru monte edilmiş bir prize bağlayın.
- Açma/kapama düğmesi cihazın şebeke gerilimiyle bağlantısını kesmez. Bağlantının kesilmesi sadece kolayca erişilebilir olması gereken elektrik adaptörü üzerinden mümkündür. Bu nedenle kolay erişilebilen bir priz kullanın, bu sayede gerektiğinde elektrik adaptörünü hızla çıkarabilirsiniz.
- Elektrik adaptörünü şarj sırasında arızalar meydana geldiyse, fırtınalı havalarda ve ürünü temizlemeden önce prizden çıkarın.
- Disko topunu güç kaynağından ayırmadan önce kapatın.

Yangın/patlama uyarısı

- UYARI! Şarjlı piller bölünmemeli, ateşe atılmamalı veya kısa devre yapılmamalıdır. Şarjlı pilleri değiştirmeyin ve/veya deforme etmeyin/ısıtmayın/bölmeyin.
- Ürüne entegre edilen pil kullanıcı tarafından değiştirilmez veya çıkarılamaz. Şarjlı pil usulüne uygun olarak değiştirilmediğinde, patlama tehlikesi mevcuttur. Sadece aynı veya aynı özelliklere sahip şarjlı pil tipleri ile değiştirilmelidir. Şarjlı pil arızalandığında, lütfen uzman bir atölyeye başvurun.

Maddi hasarlar

- Ürünü şarj etmek için sadece orijinal şarj kablosunu kullanın.
- Ürünü darbelerden, düşmelerden, tozdan, nemden, doğrudan güneş ışınlarından ve aşırı sıcaklardan koruyun.
- Temizleme için sert kimyasallar, tahrış edici ya da aşındırıcı temizlik maddeleri kullanmayın. Ürünü hafif nemli, tüy bırakmayan bir bezle temizleyin.


Pili şarj etme

İlk kullanımdan önce ve LED'ler yanıp sönmeyi bıraktığında pil şarj edilmelidir.




- Akü şarj olurken cihazı kullanabilirsiniz.
- Güç tasarrufu için şarj ettikten sonra USB elektrik adaptörünü prizden çıkarın.
- Şarjlı pilin tam kapasitesini mümkün olduğu kadar uzun bir süre muhafaza edebilmek için kullanılmadığı zamanlarda dahil 2-3 ayda bir tamamen şarj edilmelidir.

Şarj süresi: yaklaşık 2,5 saat
Aydınlatma: yaklaşık 3,5 saat

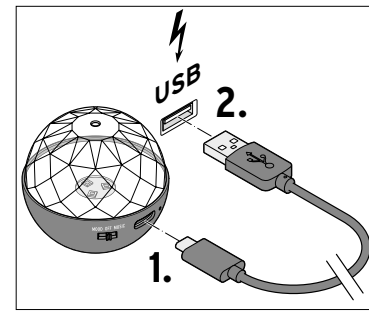

- Şarj kablosunun USB-C fişini disko topu üzerindeki bağlantı soketine takın.
- USB-A fişini uygun bir elektrik adaptörüne bağlayın (teslimat kapsamına mevcut değil).
- Elektrik adaptörünü prize takın.
- Şarj işlemi sırasında şarj gösterge ışığı kırmızı yanar. Pili tamamen şarj olduğunda yeşil yanar. Disko topu çalışmaya hazır.
- Elektrik adaptörünü prizden ve şarj kablosunu disko topu üzerindeki bağlantı noktasından çıkarın.

Kullanım

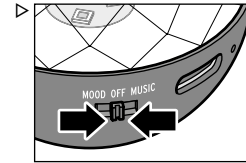

Açma/kapama şalterini **MOOD** konumuna kaydırın. Disko topunun renkleri yumuşak bir geçişle değişir.

- Açma/kapama şalterini **MUSIC** konumuna kaydırın. Disko topunun sensörü müzik veya diğer sesleri algıladığı anda LED'ler farklı renk kombinasyonlarında yanıp söner.
- Açma/kapama şalterini **OFF** konumuna kaydırın. Disko topu kapanır.

Metal disk sabitleme


Ürün, örneğin bir rafın veya benzerinin altına takılabileceğiniz metal bir diskle birlikte gelir. Daha sonra disko topunu manyetik alt taraflıya ona takabilir ve istediğiniz zaman tekrar çıkarabilirsiniz.



Mavi koruyucu filmi metal diskten çıkarın.

- Yapışkan yüzey tüm pürüzsüz ve düz yüzeylere yapışır.
- Metal disk ek yerlerinden veya diğer düzensizliklerin üzerine yapıştırmayın. Yapıştırıcı dokulu bir yüzeye yapışmayacaktır.
- Yapışkan yüzey kalıcı bağlantı için tasarlanmıştır. Daha sonra tekrar çıkarmak istiyorsanız metal disk hassas bir yüzeye tutturuktan kaçının.
- 23 °C ile 40 °C arasındaki sıcaklıklarda en iyi yapışma sonucu elde edebilirsiniz.
- Metal disk sadece mıknatısı disko topuna tutturmak için tasarlanmıştır. Üzerine başka mıknatıs takmayın.
- 1. Zeminde toz, yağ, silikon ve kireç bulunmamalıdır. Zemini temizleyin.

2. Temizlenen yeri önceden hafifçe kurulayın ve ardından iyice kurumasını bekleyin.

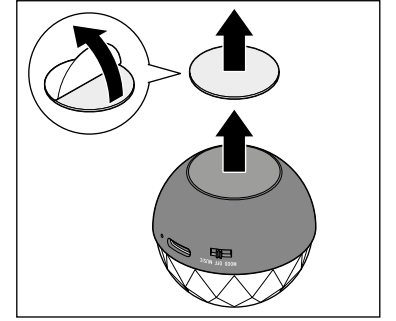

3. Metal diskin arkasındaki koruyucu filmi çıkarın ve metal diski temizlenmiş yüzeye yapıştırın.
4. Metal diskin üzerine bastırın.
5. 24 saat bekledikten sonra metal diske tamamen yüklenilebilir.

İmha etme

Ürün, ambalajı ve entegre edilmiş şarjlı pil, tekrar kullanılabilen değerli malzemelerden üretilmiştir. Tekrar kullanım sayesinde atıklar azalır ve çevre korunur.

Ambalajı malzeme türüne göre imha edin. Bunun için bölgenizdeki kağıt, mukavva ve hafif ambalaj toplama merkezlerinin sunduğu imkanlardan faydalanabilirsiniz.



Bu sembolle işaretlenen **cihazlar, piller ve şarjlı piller** ev atıkları ile birlikte atılmamalıdır! Yasalara göre atık cihazlarınızı, ev çöpünden ayrı atmak zorundasınız.

Elektrikli cihazlar tehlikeli maddeler içerir. Bunların uygun olmayan şekilde depolanması ve imha edilmesi çevreye ve sağlığa zarar verebilmektedir. Atık cihazları ücretsiz olarak geri alan toplama merkezleri hakkında bilgi almak için bağlı bulunduğunuz belediyeyle danışabilirsiniz. Boş piller ve şarjlı piller bölgenizdeki belediye atık toplama yerlerine ya da pil satan yerlerdeki toplama kaplarına bırakılmalıdır. Lityum piller/şarjlı piller için, imha etmeden önce kontakları yapıştırın.

Dikkat! Bu cihazda güvenlik nedenlerinden dolayı sabit konumda takılmış olan ve gövdeye zarar vermeden çıkarılamayacak durumda bir şarjlı pil bulunmaktadır. Kurallara uygun olmayan şekilde sökülmesi, güvenlik riski oluşturur. Bu nedenle cihazı açmadan, cihaz ve şarjlı pili gerektiği şekilde imha eden bir toplama yerine götürün.